

MRC Holland Support

Support > Help Centre > digitalMLPA & Coffalyser digitalMLPA > Raw Data Interpretation & Troubleshooting > [How do I troubleshoot digitalMLPA reactions using capillary electrophoresis?](#)

How do I troubleshoot digitalMLPA reactions using capillary electrophoresis?

This article was retrieved from support.mrcholland.com on Sunday, 11th May 2025.

When reaction failure is suspected, it is possible to visualise digitalMLPA fragments by capillary electrophoresis to verify that digitalMLPA PCR products are present. This check can be done on an ABI capillary electrophoresis device before sequencing on an Illumina-based sequencing platform. Analysis by capillary electrophoresis is intended for troubleshooting purposes only.

Important

Checking digitalMLPA reactions or libraries prior to sequencing will only reveal serious issues, such as the complete absence of digitalMLPA PCR products, but does not guarantee that the quality of the reaction is sufficient for analysis. Coffalyser digitalMLPA provides more detailed information about the quality of individual reactions using a large set of control probes present in every probemix.

Note

The quality of digitalMLPA reactions or libraries can also be [assessed using an Agilent TapeStation](#).

Procedure

If sequencing on an Illumina sequencer fails, equipment failure during a digitalMLPA run occurred, or reaction failure is suspected due to another reason, it is possible to visualise digitalMLPA fragments on an ABI capillary electrophoresis device. The forward P7 PCR primer used in the digitalMLPA PCR reaction is labelled with FAM fluorescent dye, enabling PCR product visualisation on an Applied Biosystems capillary sequencer. The FAM label does not interfere with Illumina sequencing.

Important

It is not possible to visualise FAM labelled products on SCIEX/CEQ/GeXP capillary electrophoresis devices. See [this article](#) for more details about supported capillary electrophoresis devices.

Electrophoresis specifications

PCR products from a digitalMLPA reaction should be diluted in ultrapure water before use in an injection mixture. The optimal dilution factor may require optimization, but we suggest starting with a dilution factor of 10. For example, take 1 µl of digitalMLPA

PCR products and mix with 9 μ l of ultrapure water.

Initial Assessment

1
 2
 3
 4
 5
 6
 7
 8
 9
 10
 11
 12
 13
 14
 15
 16
 17
 18
 19
 20
 21
 22
 23
 24
 25
 26
 27
 28
 29
 30
 31
 32
 33
 34
 35
 36
 37
 38
 39
 40
 41
 42
 43
 44
 45
 46
 47
 48
 49
 50
 51
 52
 53
 54
 55
 56
 57
 58
 59
 60
 61
 62
 63
 64
 65
 66
 67
 68
 69
 70
 71
 72
 73
 74
 75
 76
 77
 78
 79
 80
 81
 82
 83
 84
 85
 86
 87
 88
 89
 90
 91
 92
 93
 94
 95
 96
 97
 98
 99
 100
 101
 102
 103
 104
 105
 106
 107
 108
 109
 110
 111
 112
 113
 114
 115
 116
 117
 118
 119
 120
 121
 122
 123
 124
 125
 126
 127
 128
 129
 130
 131
 132
 133
 134
 135
 136
 137
 138
 139
 140
 141
 142
 143
 144
 145
 146
 147
 148
 149
 150
 151
 152
 153
 154
 155
 156
 157
 158
 159
 160
 161
 162
 163
 164
 165
 166
 167
 168
 169
 170
 171
 172
 173
 174
 175
 176
 177
 178
 179
 180
 181
 182
 183
 184
 185
 186
 187
 188
 189
 190
 191
 192
 193
 194
 195
 196
 197
 198
 199
 200
 201
 202
 203
 204
 205
 206
 207
 208
 209
 210
 211
 212
 213
 214
 215
 216
 217
 218
 219
 220
 221
 222
 223
 224
 225
 226
 227
 228
 229
 230
 231
 232
 233
 234
 235
 236
 237
 238
 239
 240
 241
 242
 243
 244
 245
 246
 247
 248
 249
 250
 251
 252
 253
 254
 255
 256
 257
 258
 259
 260
 261
 262
 263
 264
 265
 266
 267
 268
 269
 270
 271
 272
 273
 274
 275
 276
 277
 278
 279
 280
 281
 282
 283
 284
 285
 286
 287
 288
 289
 290
 291
 292
 293
 294
 295
 296
 297
 298
 299
 300
 301
 302
 303
 304
 305
 306
 307
 308
 309
 310
 311
 312
 313
 314
 315
 316
 317
 318
 319
 320
 321
 322
 323
 324
 325
 326
 327
 328
 329
 330
 331
 332
 333
 334
 335
 336
 337
 338
 339
 340
 341
 342
 343
 344
 345
 346
 347
 348
 349
 350
 351
 352
 353
 354
 355
 356
 357
 358
 359
 360
 361
 362
 363
 364
 365
 366
 367
 368
 369
 370
 371
 372
 373
 374
 375
 376
 377
 378
 379
 380
 381
 382
 383
 384
 385
 386
 387
 388
 389
 390
 391
 392
 393
 394
 395
 396
 397
 398
 399
 400
 401
 402
 403
 404
 405
 406
 407
 408
 409
 410
 411
 412
 413
 414
 415
 416
 417
 418
 419
 420
 421
 422
 423
 424
 425
 426
 427
 428
 429
 430
 431
 432
 433
 434
 435
 436
 437
 438
 439
 440
 441
 442
 443
 444
 445
 446
 447
 448
 449
 450
 451
 452
 453
 454
 455
 456
 457
 458
 459
 460
 461
 462
 463
 464
 465
 466
 467
 468
 469
 470
 471
 472
 473
 474
 475
 476
 477
 478
 479
 480
 481
 482
 483
 484
 485
 486
 487
 488
 489
 490
 491
 492
 493
 494
 495
 496
 497
 498
 499
 500
 501
 502
 503
 504
 505
 506
 507
 508
 509
 510
 511
 512
 513
 514
 515
 516
 517
 518
 519
 520
 521
 522
 523
 524
 525

Initial
Institutional
Director
A
B
B
B
S
e
d
s
t
u
d
e
d
p
C
R
r
e
a
c
t
i
o
n
.
.
0
.
3
μ
l
R
O
X
/
L
I
Z
G
S
S
0
0
s
i
z
e
s
t
a
n
d
a
r
d
.
.
1
2
μ
l
H
i
D
i
f
o
r
m
a
m
i
d
e
.
S
e
a
l
t
h
e
i
n
j
e
c
t
i
o
n
p
l
a
t
e
.
H
e
a
t
3
m
i
n
a
t
8
6
°
C
.
c
o
o
l
f
o
r
2
m
i
n
a
t
4
°
C
.
.

- a. The volume of PCR product added should never exceed 10% of the total injection mixture.
Only use diluted digitalMLPA PCR products.
- b. Reduce volume of size standard if needed.
- c. For the ABI-3500: set run voltage to 15 kV and ensure sufficient run time.
- d. Briefly heating the injection mixture before capillary electrophoresis is recommended.

Expected digitalMLPA peak pattern

Most digitalMLPA probes generate amplicons between 190 and 210 nt. These amplicons will result in a broad, usually off-scale, peak between these fragment sizes (see Figure 1). This broad 190–210 nt peak should be the dominant peak visible in your peak pattern. Individual fragments are not visible. Q-fragment peaks, used for DNA quantity estimation, may be visible at around 145 and 150 nt when low amounts of sample DNA are used. Primer remnants, modified primers, and primer breakdown products may be visible in the electropherogram around 25 nt. An additional broad peak between 95 and 110 nt will likely also be visible in your peak pattern. This and other distinct visible peaks not specifically mentioned are the result of non-specific amplification products that will not affect your digitalMLPA reaction.

There are two options to view digitalMLPA troubleshooting results from a CE device.

1. The electropherogram can be viewed in Coffalyser.Net, our free analysis software for conventional MLPA. The raw data can be evaluated in the raw data tab of the sample results explorer. For optimal results, download the [digitalMLPA troubleshooting sheet for Coffalyser.Net](#). This sheet can help you identify the probes peak at 190–210 nt and the nonspecific peak between 95 and 110 nt (Figure 1B). To use the sheet, import it in Coffalyser.Net, set the analysis method to population, set the probe recognition method to manual during fragment analysis, and view the pattern in the genomic profile sheet of the sample results explorer. [Adjust the zoom level](#) as needed.
2. The electropherogram can be viewed on your capillary electrophoresis device.

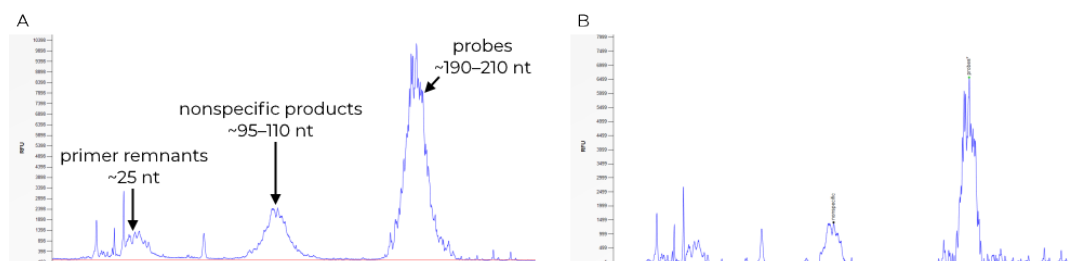


Figure 1. Capillary electrophoresis pattern of a successful digitalMLPA reaction. (A) Raw data viewed in Coffalyser.Net. (B) Annotated data from the genomic profile tab of the sample results explorer in Coffalyser.Net using the MRC Holland supplied digitalMLPA troubleshooting Coffalyser.Net sheet. The differences in the pattern are caused by baseline correction. The raw data pattern is leading but the genomic

profile can help with peak identification.

digitalMLPA reaction failure peak patterns

When reaction failure has occurred the expected large peak between 190 and 210 nt will be absent or severely diminished. A sample where a digitalMLPA reaction with the same digitalMLPA probemix was successful can be used for comparison. NOTE: Peak patterns are not expected to be identical, some variation will be present.

In a failed reaction, the Q-fragment peaks at 145 and 150 nt are usually still visible. If this is not the case, this may be explained by e.g. the omission of probemix or polymerase from the reaction, or by impurities in the DNA sample that fully inhibited polymerase activity.

In case of reaction failure check your reagents, sample quality, and equipment before repeating your digitalMLPA reaction. Ensure all steps outlined in the [digitalMLPA General Protocol](#) are followed exactly as written.

Precautions

- Baseline correction by ABI analysis software will alter the peak pattern image in relation to the one displayed in our guide (Figure 1). Any image where a large peak is visible in the 190–210 nt range indicates the reaction was successful.
- The cause of digitalMLPA reaction failure cannot fully be determined by examining the peak pattern generated by capillary electrophoresis. Sequencing of suspected failed reactions may also give insight into the cause of the reaction failure as every digitalMLPA probemix includes control probes for enzyme activity and DNA quality.

Additional information

- Non-specific peaks smaller than 120 nt may generate sequencing clusters but most will not generate reads.
- Non-specific peaks larger than 120 nt may generate reads but almost all will be removed during analysis by Coffalyser digitalMLPA.

For additional digitalMLPA troubleshooting advice please see the [digitalMLPA General Protocol](#) or [contact us](#).

Tags

digitalMLPA

Related Pages

- [Should I measure the concentration of my digitalMLPA library?](#)
- [Can I assess my digitalMLPA reactions or library using a TapeStation?](#)
- [How can I visualise digitalMLPA reactions using electrophoresis?](#)

Disclaimer

The information provided in this material is correct for the majority of our products. However, for certain applications, the instructions for use may differ. In the event of conflicting information, the relevant instructions for use take precedence.